USING TESTIFIRE

5 POWERING ON THE UNIT

Press and hold the red power button for 2 seconds.



Select your required operating language.




6 PERFORMING A SINGLE TEST

Select a test from the main menu by



The test will begin when the head unit is placed over the detector, breaking the infrared beam. When the detector is activated, remove Testifire by lowering it gently. Testifire will return to idle.

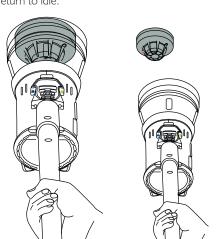

SEQUENTIAL TESTING. SMOKE + HEAT TEST

Press the enter key to select smoke, followed by heat.





detector.





The smoke test will begin when the head unit is placed over the






When the detector is activated, remove Testifire by lowering it



After 2 seconds raise again to begin the heat test.



Lower Testifire once the heat test has completed. Testifire will return to idle.



SIMULTANEOUS/MULTI-SENSOR TESTING

Press the enter key **Twice** to select each test.




NOTE


selected for a simultaneous test.

The test LED will alternate the color of all selected test modes when

Raise Testifire over the detector. Smoke.

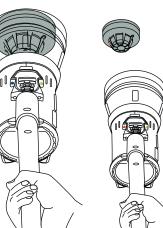

heat and CO are tested at the same time in a simultaneous test. Once the alarm is triggered lower Testifire. Testifire will return to idle with the same settings - ready for the next simultaneous test.

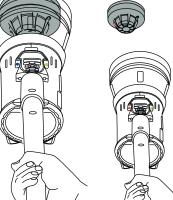

QUICK START GUIDE

(a) testifire

2000 SERIES

www.detectortesters.com/testifire








During a smoke test a slight 'popping' sound may be heard. This is normal and part of the test procedure.

1 CHARGING THE BATTERY

Connect the charger to a power source. Connect the battery baton to the charger and turn the locking ring.

NOTE:

Always disconnect the battery from the charger as soon as it is fully charged.

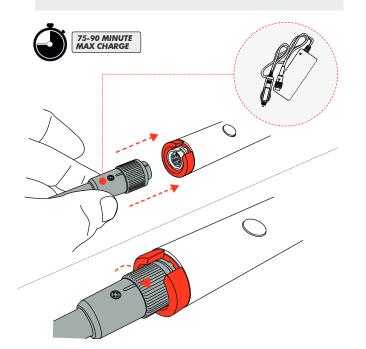


2 INSERTING THE BATTERY BATON


Align the button with the location hole in the handle and push the Battery Baton into the handle until the button springs up through the hole.

NOTE:


Do not use undue force to insert the battery baton.

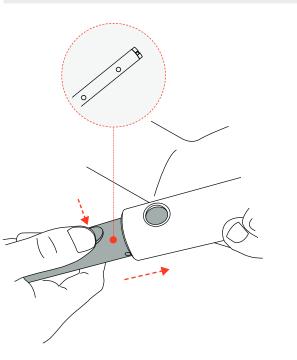


3 INSERTING THE SMOKE CAPSULE






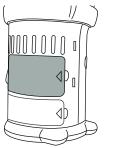

4 INSERTING THE CO CAPSULE



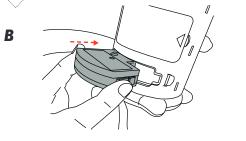





INTERFACE

